



放料定位组件

32	01-505001024-3	内六角圆柱头螺钉 M5×10	4	
31	01-504001024-3	内六角圆柱头螺钉	4	
30	01-503000824-3	内六角圆柱头螺钉M3×8	15	
29	05-032050700-3	平垫圈 3.2×0.5×7	20	
28	07-0310808-3	弹性垫圈 3.1×0.8×0.8	20	
27	01-503001024-3	内六角圆柱头螺钉 M3×10	4	
26	05-042121000-3	平垫圈 4.2×1.2×10	14	
25	07-0421111-6	弹性垫圈 4.2×1.1×1.1	14	
24	01-504001024-6	内六角圆柱头螺钉M4×10	10	
23	01-503000624-3	内六角圆柱头螺钉M3×6	39	
22	01-505001224-6	内六角圆柱头螺钉 M5×12	4	
21	05-053201000-3	平垫圈 5.3×2×10	8	
20	07-0521313-6	弹簧垫圈 5.2×1.3×1.3	8	
19	PSL4M5A	调速阀	2	
18	532.04-01-06	定位板7	1	
17	F-MI12LB(16)	气缸座	1	
16	MI12×150-U+(MDSG-1)	气缸	1	
15	MGN9C-31(-2)	导轨	1	
14	PSL601A	调速阀	2	
13	532.04-01-09	外连接角板9	1	
12	72-M-5HL-4	金属弯头	2	
11	532.04-01-08	内连接板11	1	
10	532.04-01-05	气缸连接角板	1	
9	532.04-01-13	连接板3	1	
8	MD16×15S+DMSG-N-1	气缸	1	
7	MGN9C-64	导轨	1	
6	532.04-01-12	送料机架连接板13	1	
5	MGN9C-250	导轨	1	
4	MA25×200SCALB+DMSG-N-2	气缸	1	
3	532.04-01-07	连接板8	1	
2	532.04-01-02	放袋定位装置安装方管	1	
1	532.04-01-01	气缸安装板16	1	
序号	图号	名称	数量	备注